
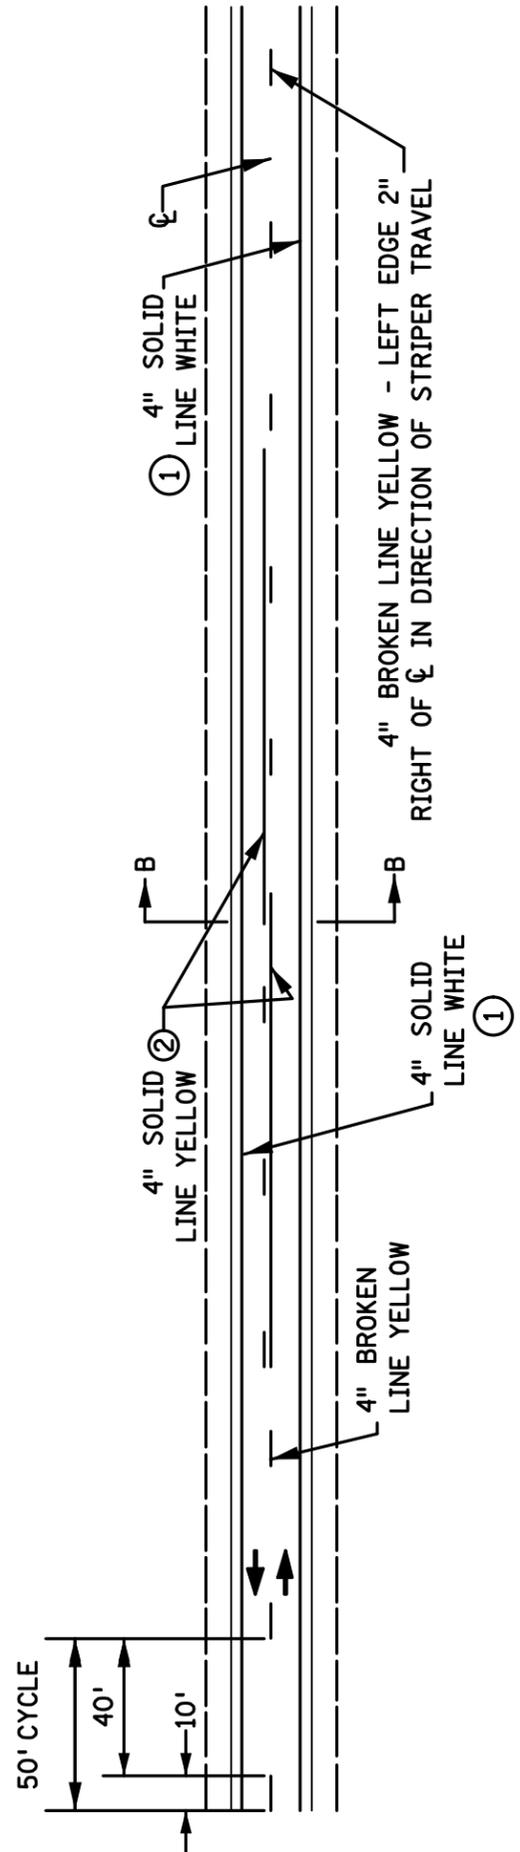



TWO-LANE, TWO-WAY

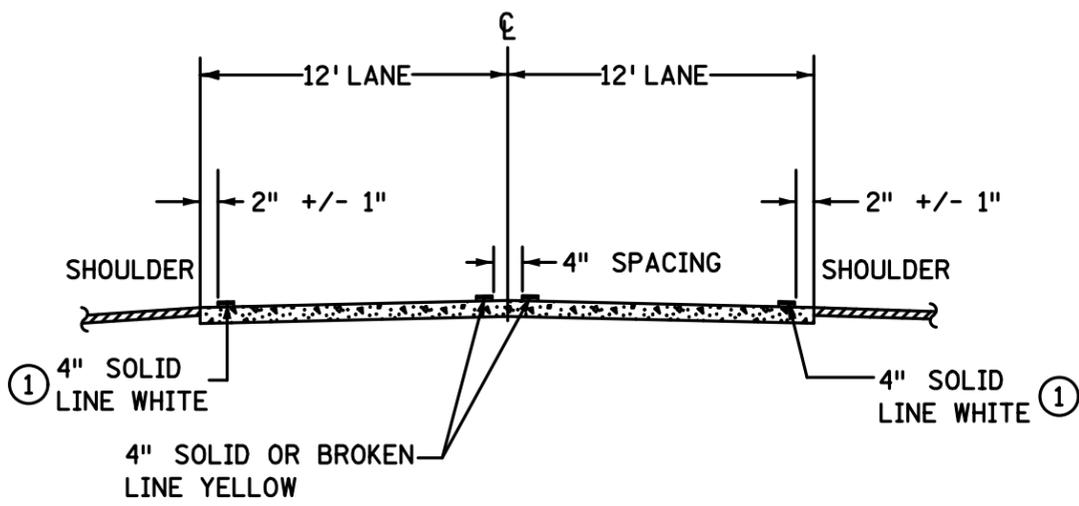


DESIGNER'S NOTES:

- ① USE 6" EDGE LINES ON 2-LANE 2-WAY RURAL TYPE ROADWAYS WITH OUT SHOULDER RUMBLES.
- ② CONTACT TRAFFIC ENGINEER FOR NO PASSING ZONE SURVEY.


MULTI-LANE UNDIVIDED ROADWAY

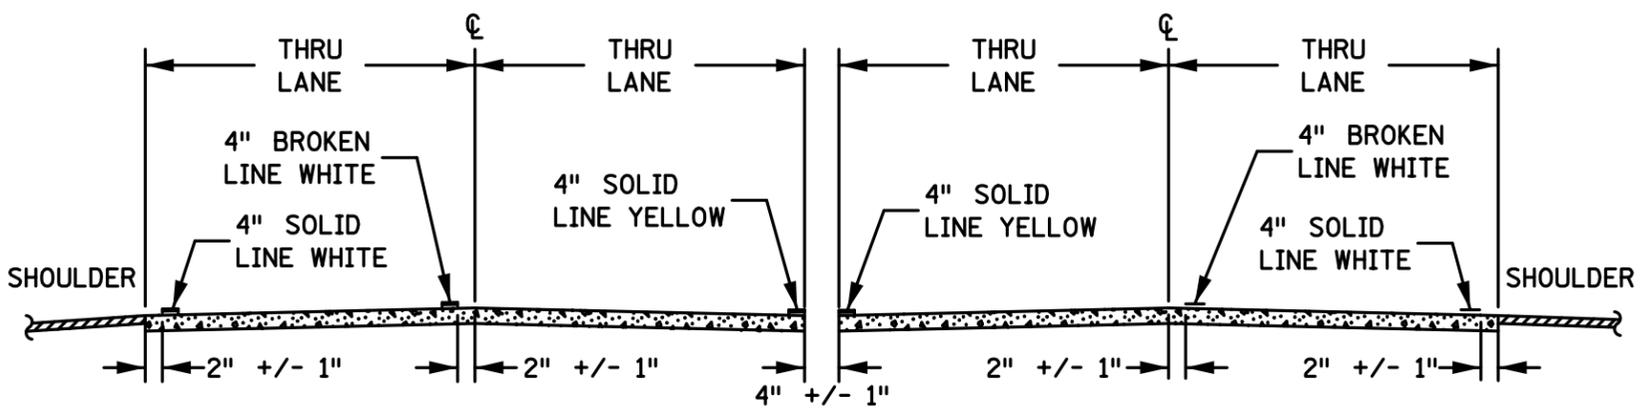



SECTION D-D

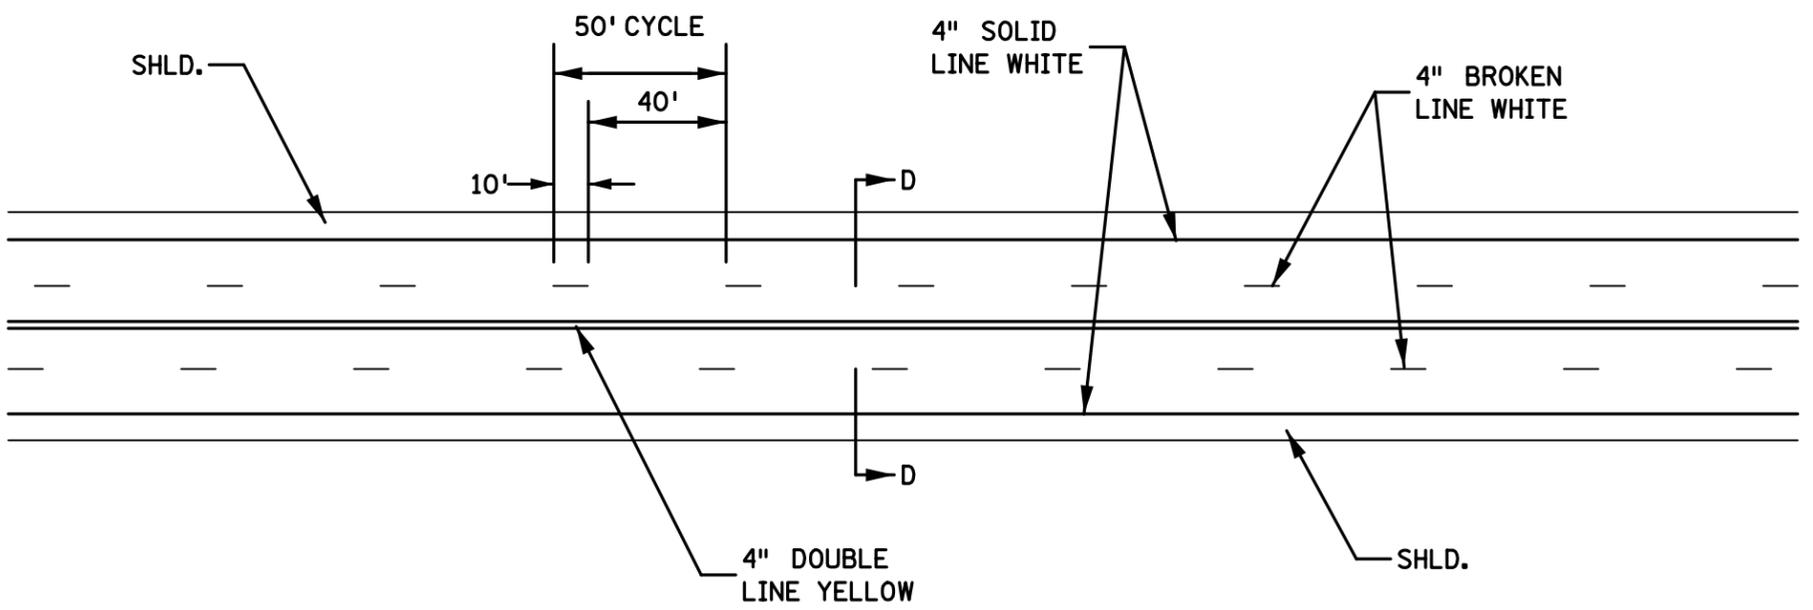


MULTI-LANE, TWO-WAY UNDIVIDED ROADWAY WITH SINGLE LANE LEFT TURN CHANNELIZATION

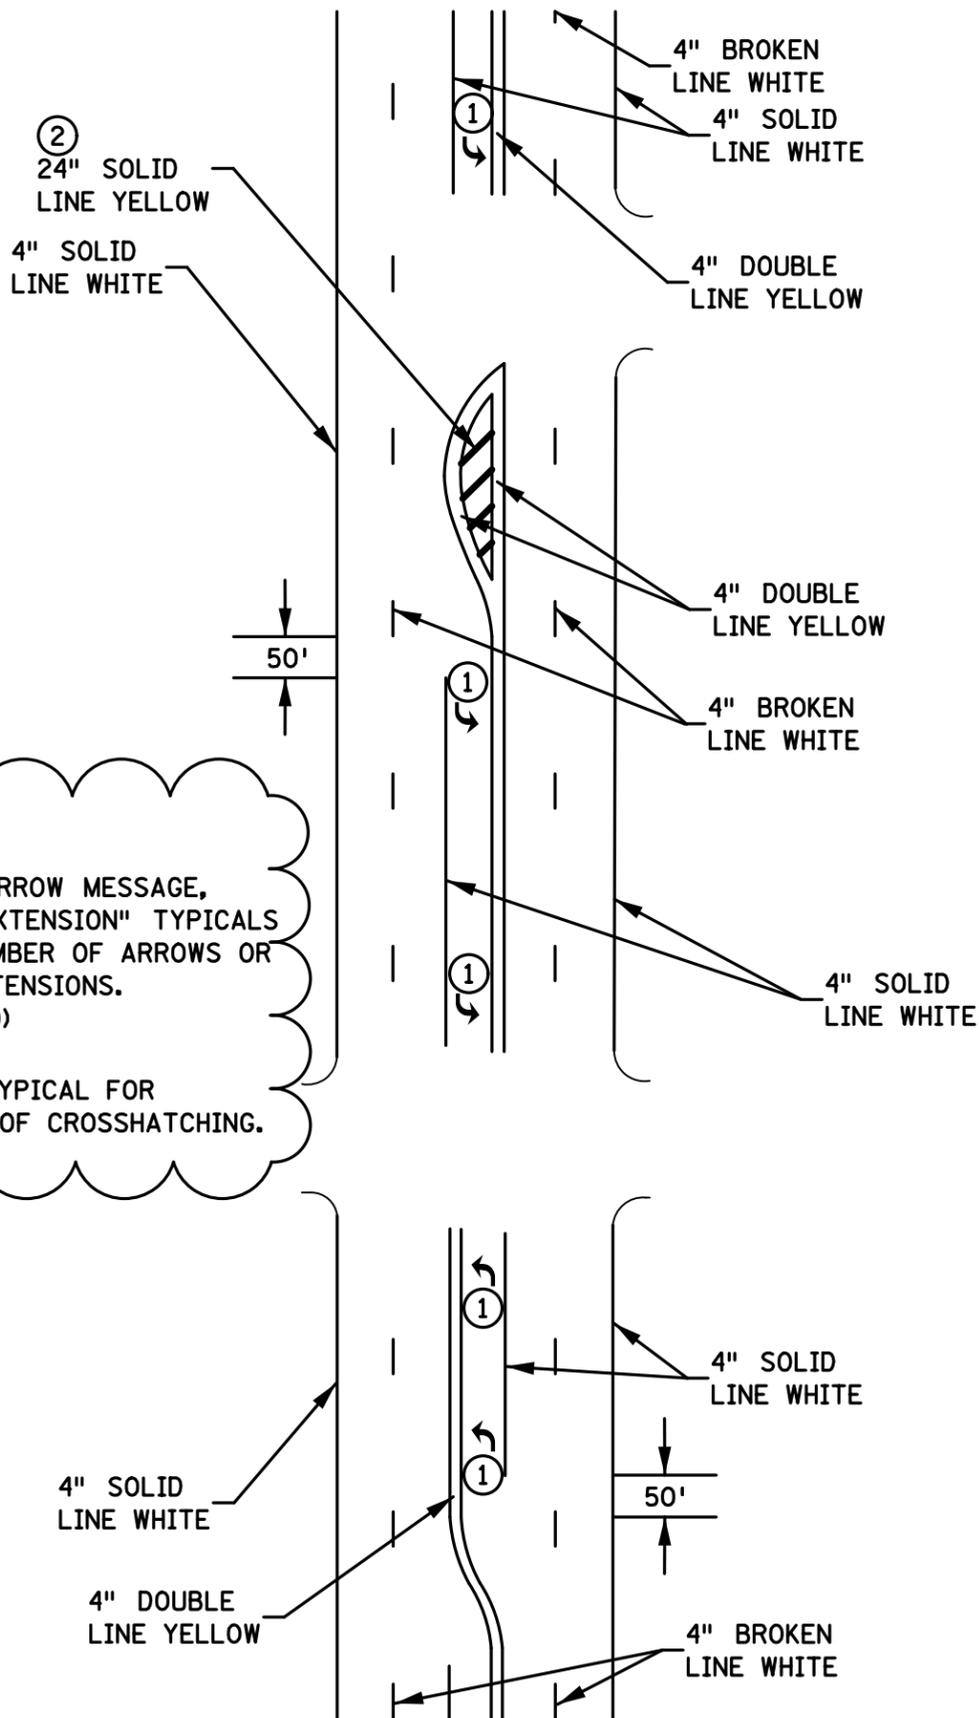

FOUR-LANE DIVIDED LANE

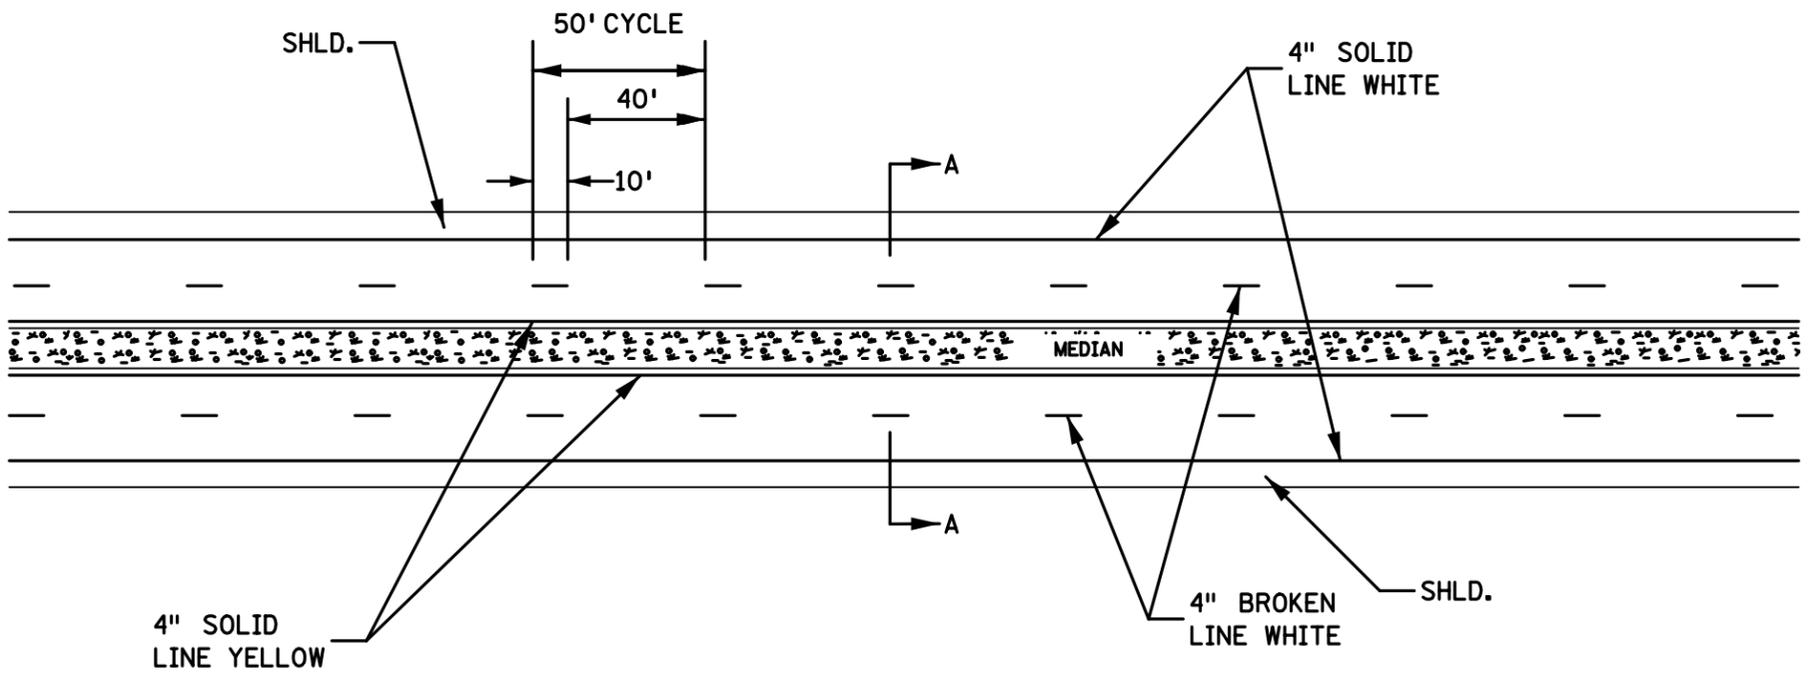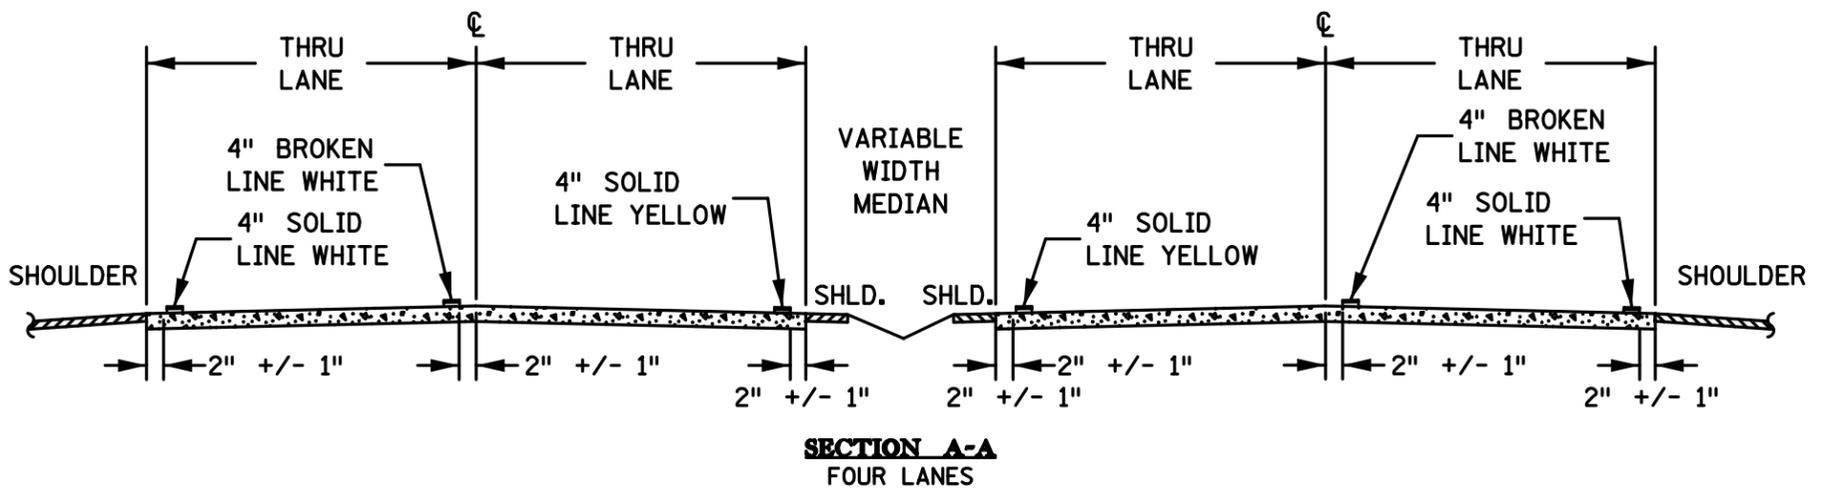

TWO-WAY LEFT-TURN LANE

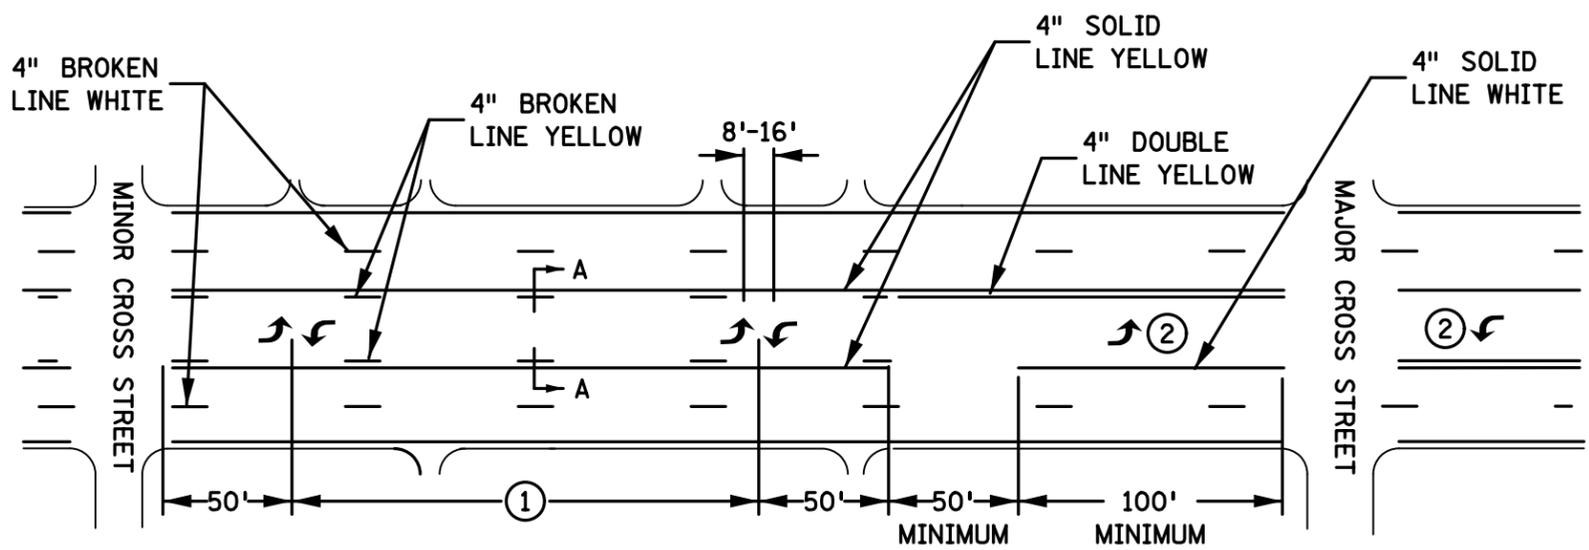

DESIGNER'S NOTES:

SINGLE-DIRECTION LEFT-TURN ARROWS SHALL NOT BE USED IN LANES BORDERED ON BOTH SIDES BY TWO-WAY LEFT TURN LANE MARKINGS.

- ① INSERT SPACING, BASED ON FIELD CONDITIONS.
- ② SEE "TURN LANE WITH ARROW MESSAGE, OR WITH DOTTED LINE EXTENSION" TYPICALS FOR PLACEMENT AND NUMBER OF ARROWS OR OPTIONAL LANE LINE EXTENSIONS. (MNMUTCD SECTION 3B.20)

